

Vulcan

Assembly Guide



Thank you for purchasing Knight product.

Please carefully read the assembly instructions prior to installment to gain a complete understanding of the product. It provides you with important information about the safety, use, installation and maintenance.

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

Safety

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily
 harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.

Set Up and Installation


- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.

Any questions contact Knight on 0800 143 143

Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.





Tools Required: Powered Screwdriver

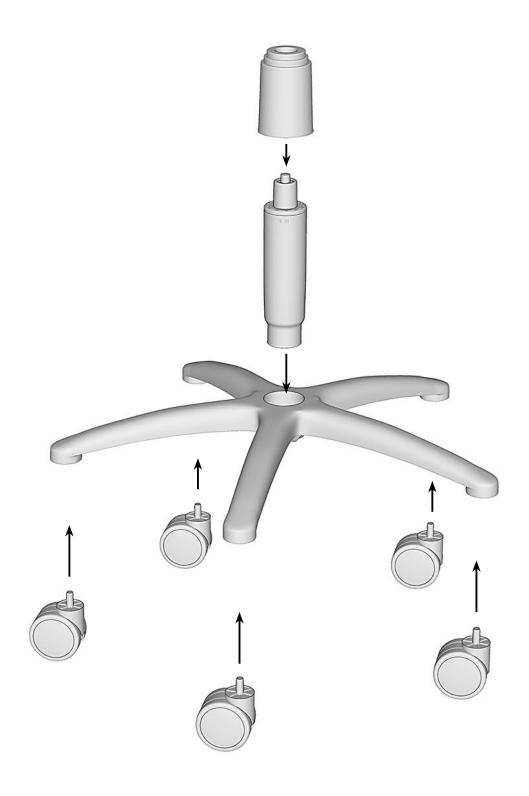

knightgroup.co.nz

Step 2

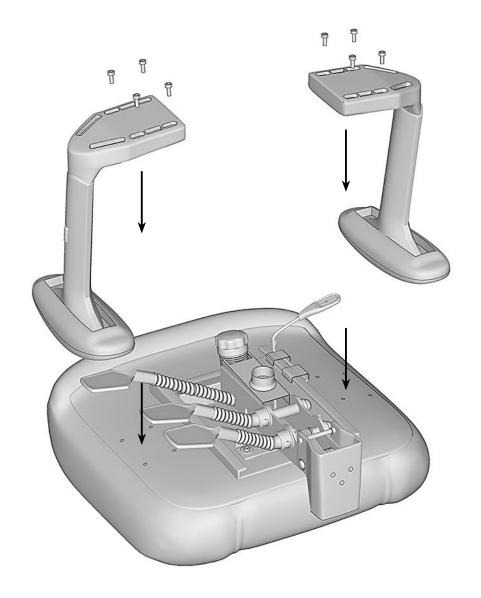

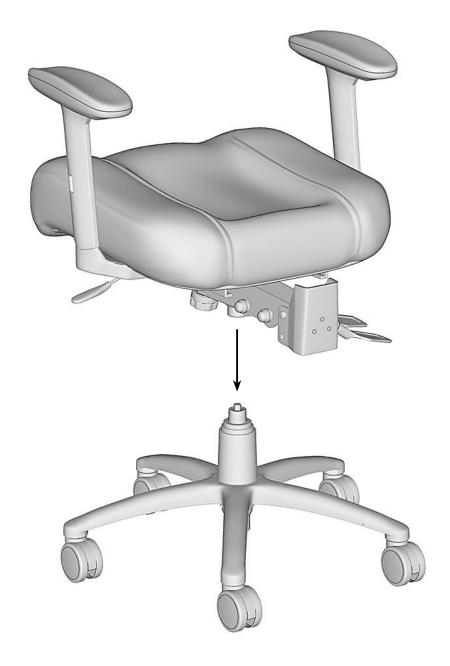

Vulcan K 5 knightgroup.co.nz




Step 4



User Adjustment



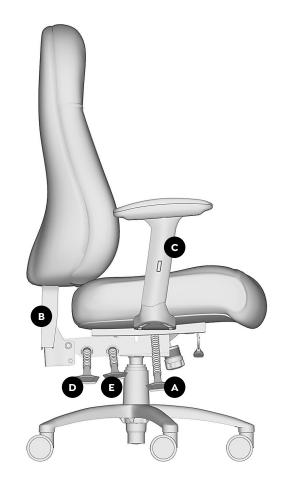

- **Seat Height**
 - Lift up lever on right-side to raise or lower seat. Adjust so that your feet are adequately supported on the floor.
- **Backrest Height**

Hold backrest by both sides and pull up to desired height. To lower backrest, pull it to maximum height and then, return to lowest height to start again. Adjust height so that the backrest curvature follows the curve of your back.

Armrest Height

Press the button and raise or lower the armrest. Adjust height to adequately support elbows to take strain off shoulders.

Backrest Angle Lift up lever to unlock backrest. Recline to desired position, and release lever to lock.

Seat Tilt Lock

First, ensure backrest angle is locked by pushing down lever. Recline to desired angle, and push down lever to lock. Lift up lever to release tilt-lock.

Tilt Tension Control

Turn knob clockwise to provide a stronger tilt tension, and vice-versa. Adjust such that minimum effort is required to push back when reclined.

Seat Depth

Pull out side lever and adjust by pushing seat forwards or backwards. Release lever to lock in desired position. Adjust depth so that seat edge clears back of knees to ensure your back is always supported.

Vulcan 7 knightgroup.co.nz



in fo@knight group.co.nz

f in