




# AVERO DESK **ASSEMBLY GUIDE**

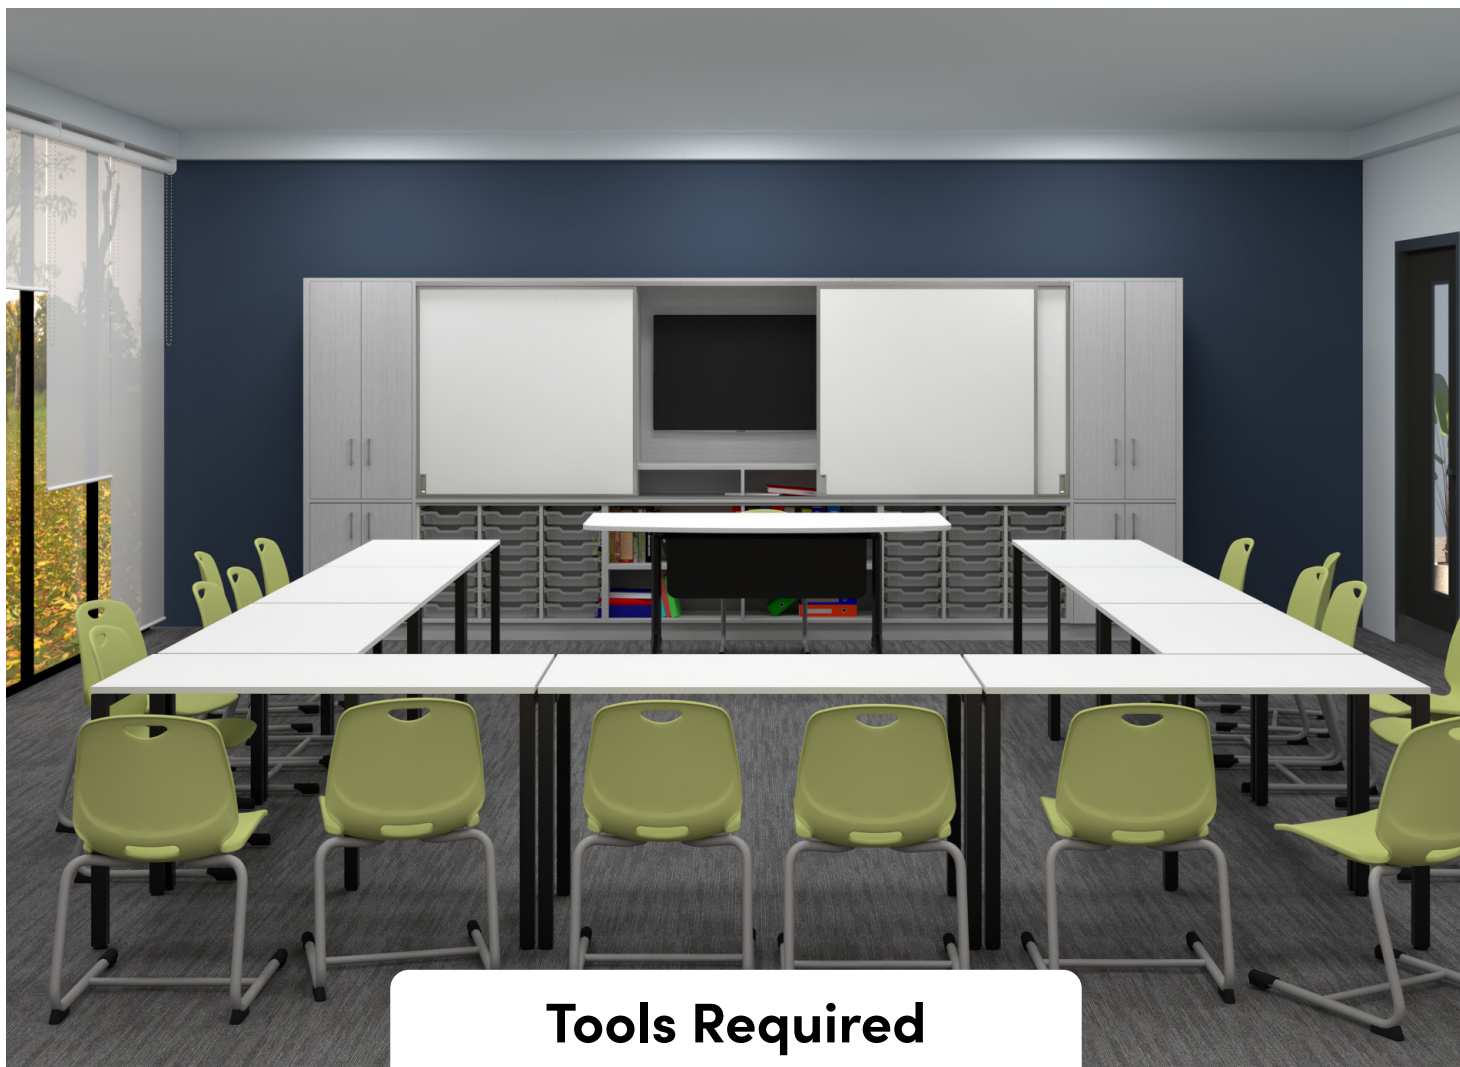




## Tools Required



Battery Drill



Phillips Driver Tip

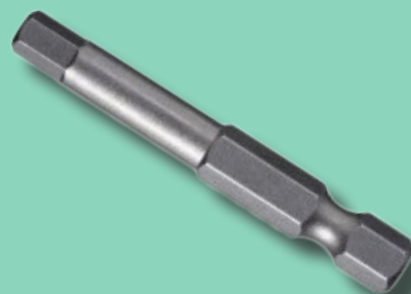







4mm Hex Bit

**Accent**  
workspace furniture solutions

# STRAIGHT DESK

## PARTS LIST

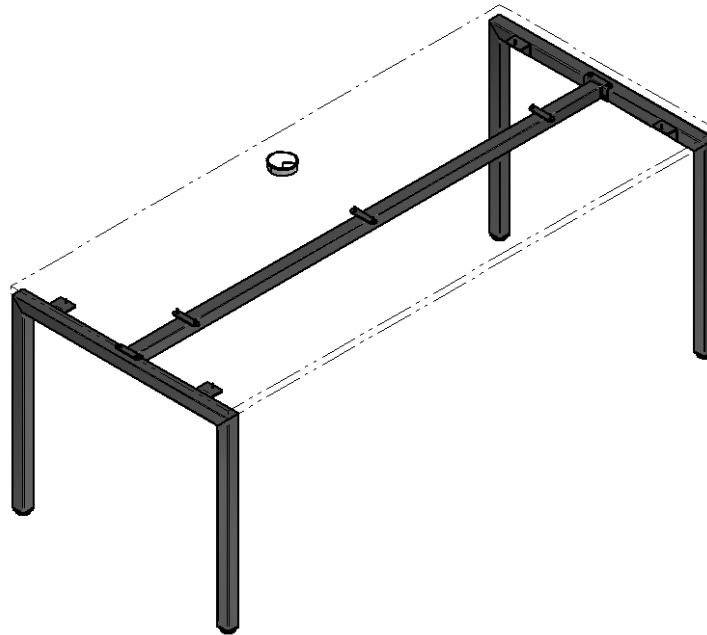

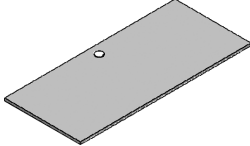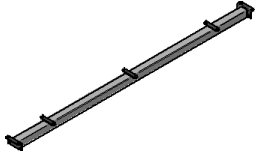
| NO. | NAME           | QUANTITY | IMAGE                                                                                 |
|-----|----------------|----------|---------------------------------------------------------------------------------------|
| 1   | Desk Top       | 1pc      |   |
| 2   | Leg Frame      | 2pcs     |  |
| 3   | Fixed Beam     | 1pc      |  |
| 4   | Cable Entry    | 1pc      |  |
| 5   | Wood Screw     | 10pcs    |   |
| 6   | CSK Bolts      | 4pcs     |  |
| 7   | Flat Head Bolt | 4pcs     |  |

# STRAIGHT DESK


## ASSEMBLY INSTRUCTION

### STEP 1

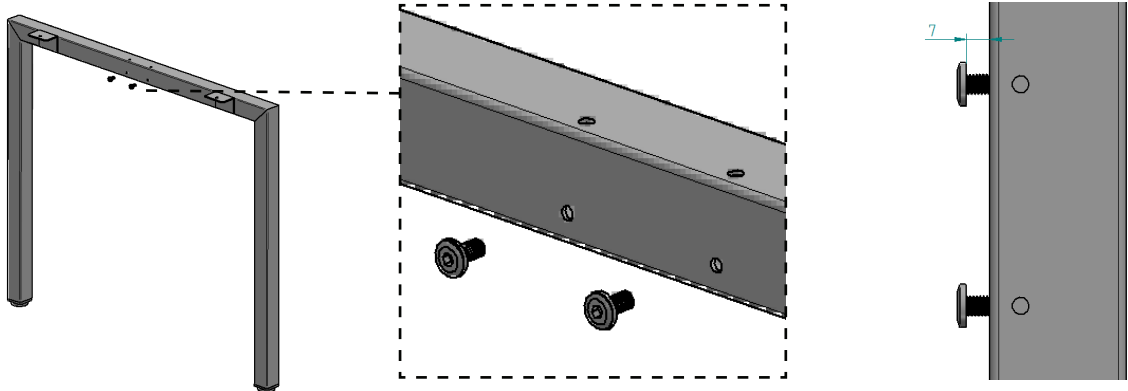


Install flat head bolts to the side of the leg. Note: Ensure the flat head bolt is installed with the head protruding approximately 7mm from the surface. This spacing is necessary for the next step.

### STEP 2

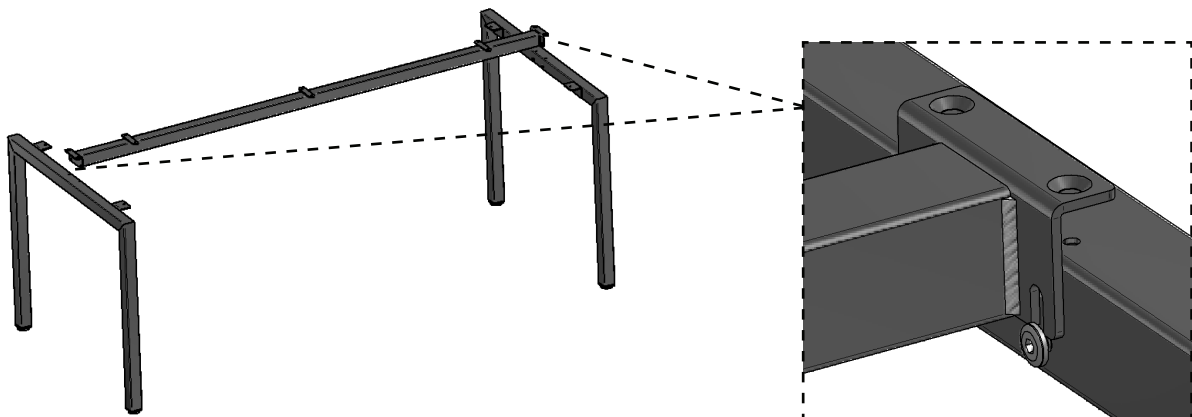

Attach the beam to the leg.

### STEP 3

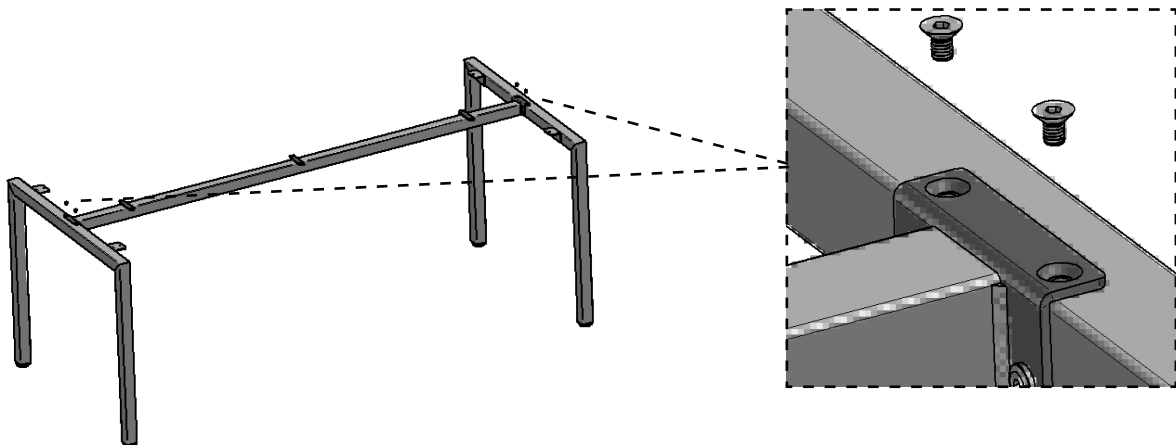


Install bolts to the top of the leg frame. Tighten bolts on the top and side for the leg. *Do not overtighten – excessive force may strip threads or damage component.*

# STRAIGHT DESK


## ASSEMBLY INSTRUCTION

### STEP 4

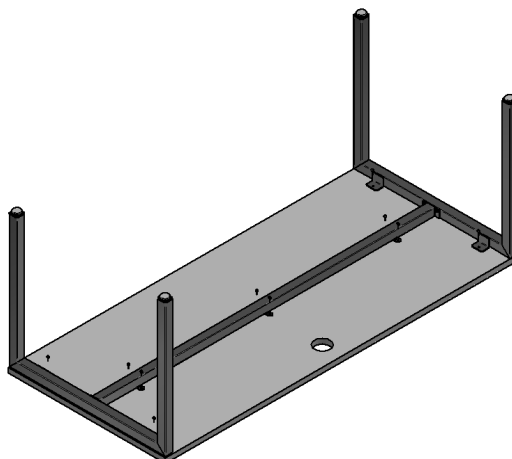

Place the table top upside down on a clean flat surface. Attach the frame to the desktop.

### STEP 5

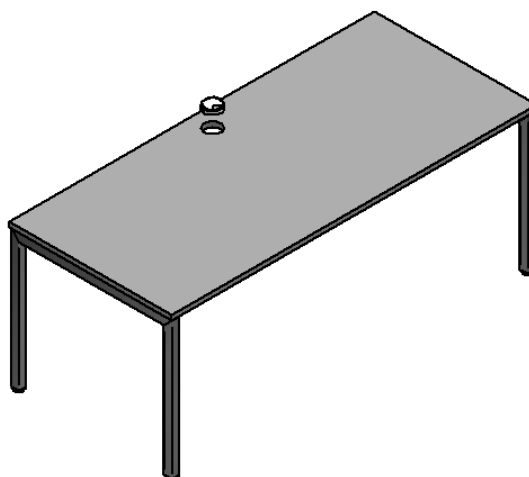

Install the cable entry.

### STEP 6

