

BALANCE DESK **ASSEMBLY GUIDE**





Tools Required



Battery Drill



Phillips Driver Tip




Soft Hammer

Accent
workspace furniture solutions

CORNER WORKSTATION

with 90degree corner leg

PARTS LIST

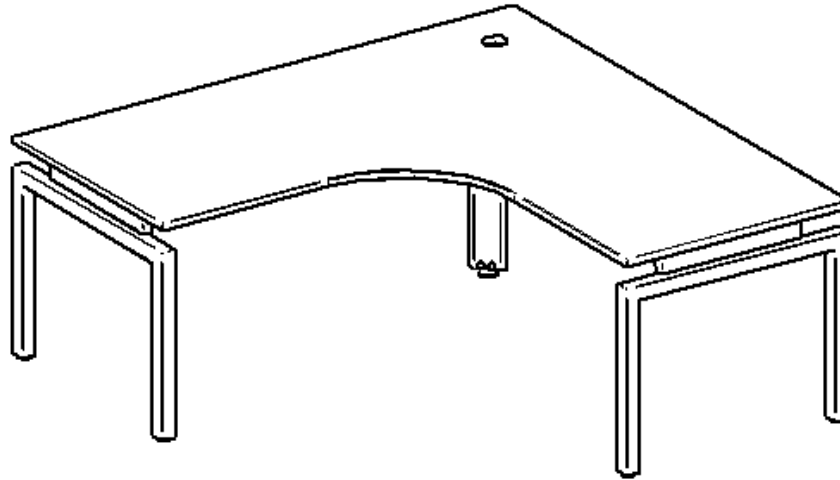


NO.	NAME	QUANTITY	IMAGE
1	Balance End Leg	2pcs	
2	90degree Back Corner Leg	1pc	
3	90degree Leg Bracket	1pc	
4	Extendable Beam	2pcs	
5	Bolts	10pcs	
6	Wooden Screw	26pcs	
7	Desk Top	1pc	

CORNER WORKSTATION


with 90degree corner leg ASSEMBLY INSTRUCTION

STEP 1

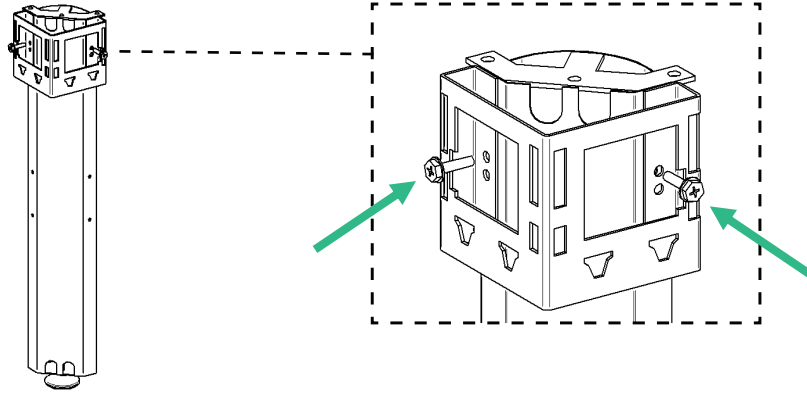


Attach 90degree bracket to the 90degree back corner leg as per above, using bolts supplied with the bracket.

STEP 2

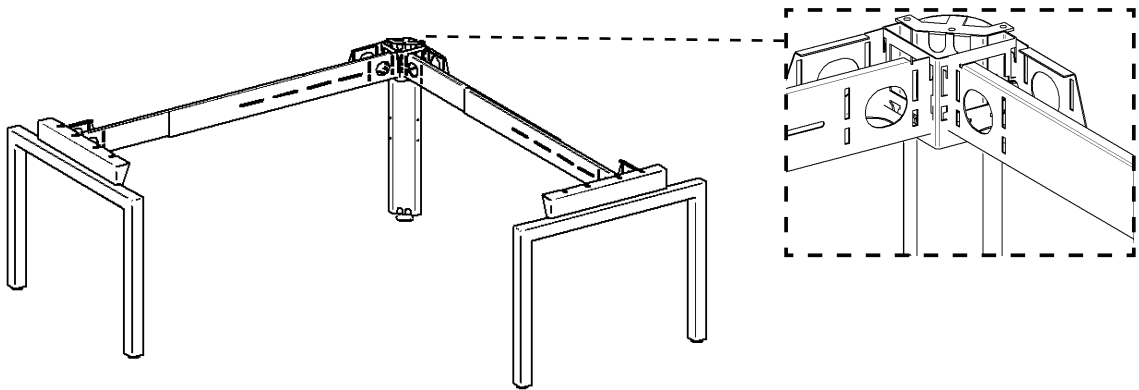

Attach extendable beams to the 90degree back corner leg and Balance end legs as per above, open side of the beam to face the back of the desk. Use nylon hammer to hit beam down into place. Using the bolt supplied with the beam, install 2 bolts front and back of each beam as per above.

STEP 3

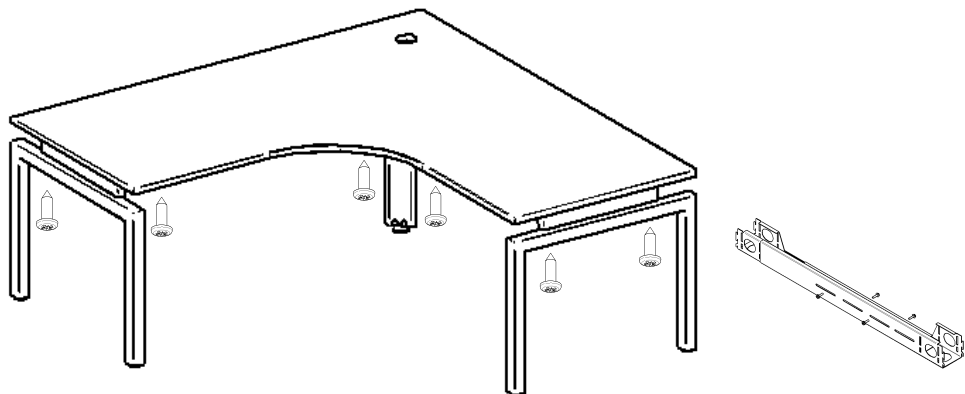

Place desk tops on to the leg frame as per above. Extend beams out so end leg are inline with the edge of the desk top. Desk top will be predrilled for the legs. Attach desk top to the legs and beams using the wood screws supplied.