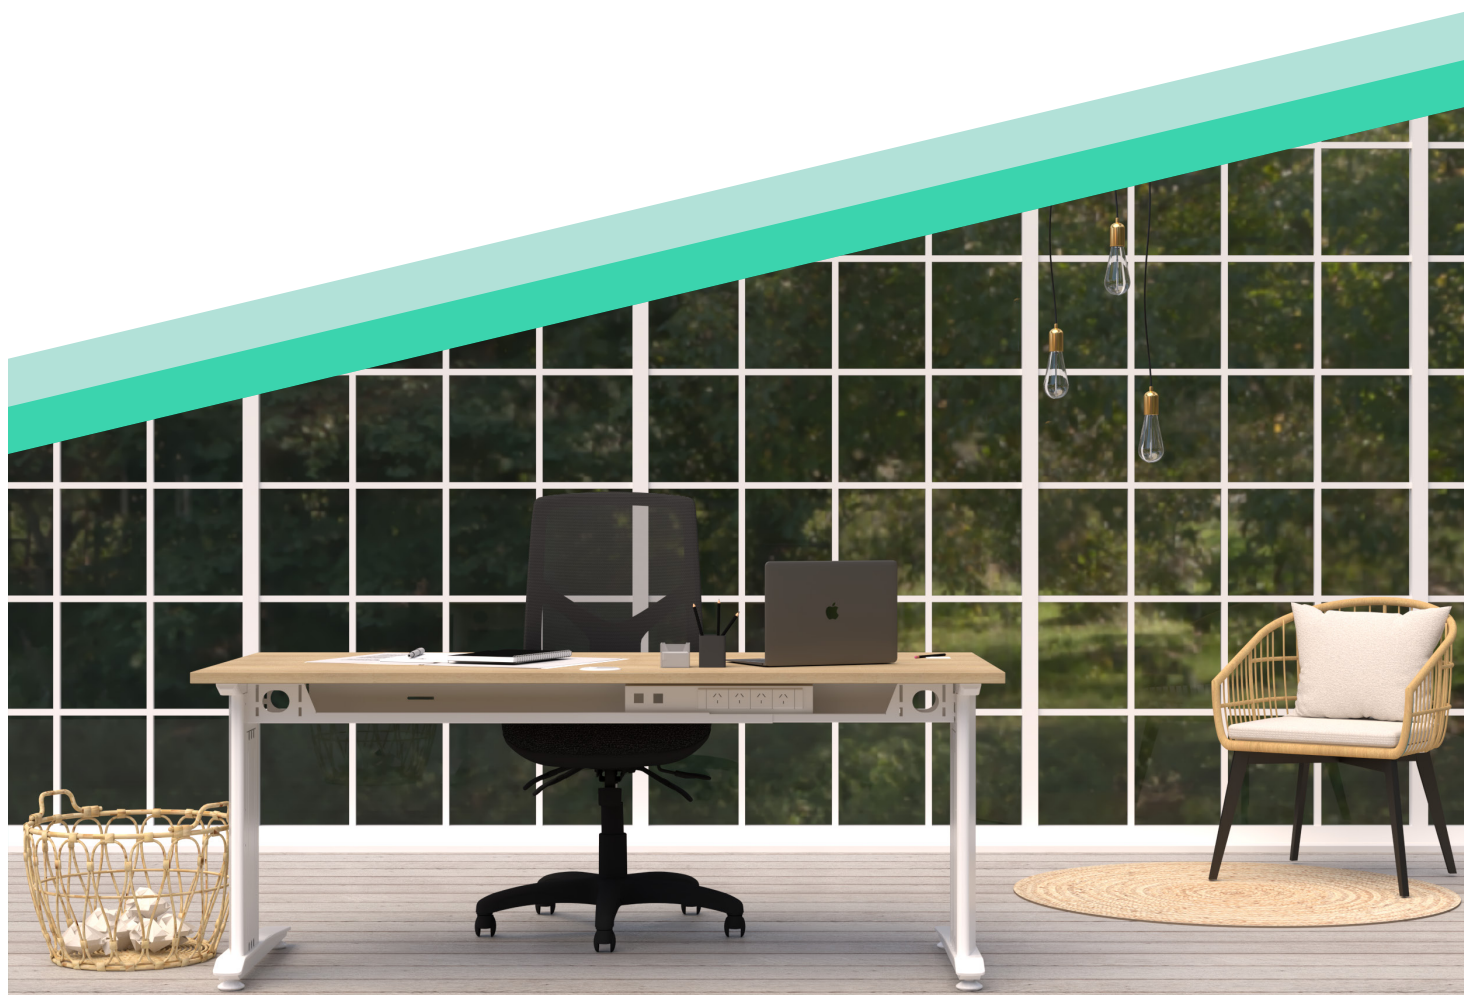


ENERGY DESK **ASSEMBLY GUIDE**





Tools Required



Battery Drill



#2 Phillips Driver Tip



#2 Square Driver Tip

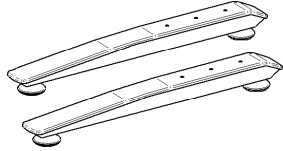
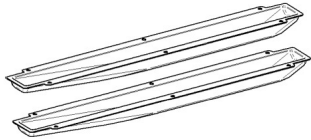
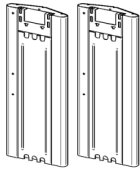

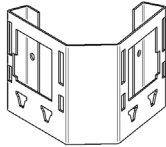
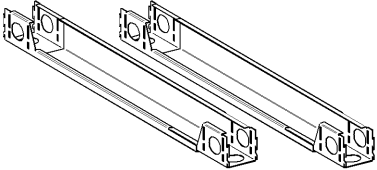

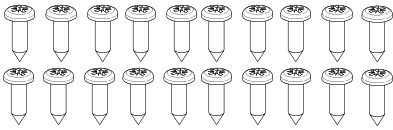



Soft Hammer

Accent
workspace furniture solutions

120DEGREE SINGLE DESK


PARTS LIST

NO.	NAME	QUANTITY	IMAGE
1	Foot	2pcs	
2	Leg Top Plate	3pcs	
3	Leg Column LH/RH	2pcs	
4	Corner Pole leg	1pc	
6	120 Degree Corner Bracket	1pc	
7	Extendable Beam	2pcs	
8	Bolt A	14pcs	
9	Bolt B	20pcs	
10	Desk Top	1pc	

120DEGREE SINGLE DESK


ASSEMBLY INSTRUCTION

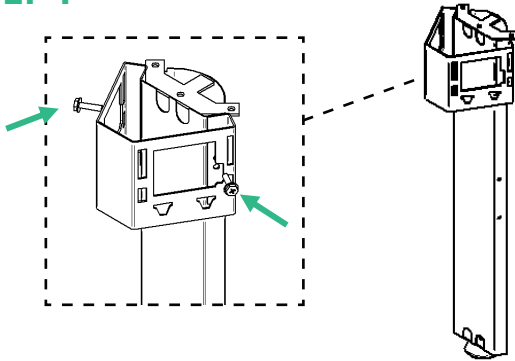STEP 1




Attach 120degree bracket to the 120degree back corner leg as per above, using Bolts supplied with the bracket.

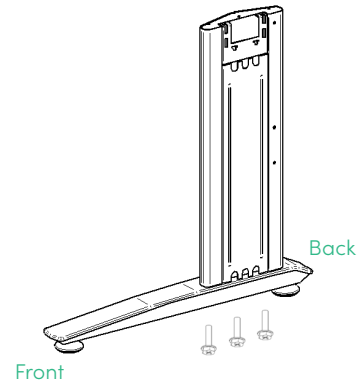STEP 2




Attach Leg column to Foot, using bolt A. Make sure the bolt holes on the leg column are to the back of the foot as per above.

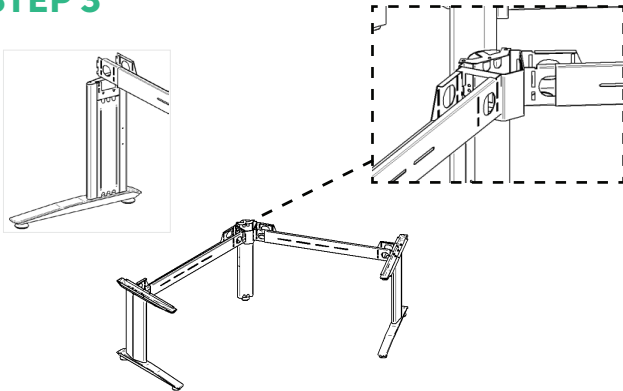STEP 3




Attach the Extendable beam to the leg column as per above, the open side of the beam to the back. Use a nylon hammer to hit the top of the beam into place.

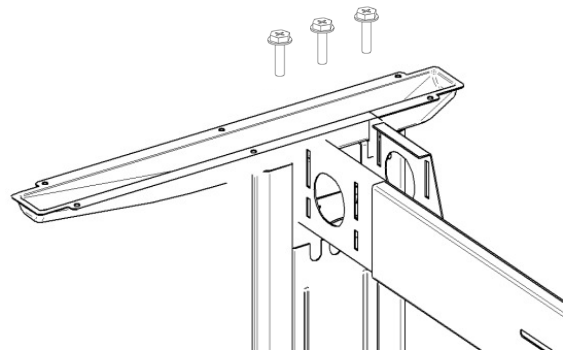STEP 4




Attach the top plates to the leg columns using bolt A.

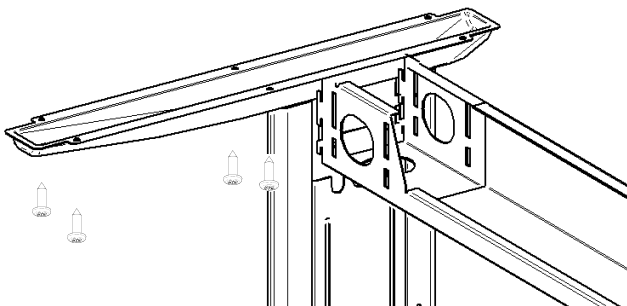STEP 5



Place Desk top on the base frame, attach the desk top to the frame with bolt B.

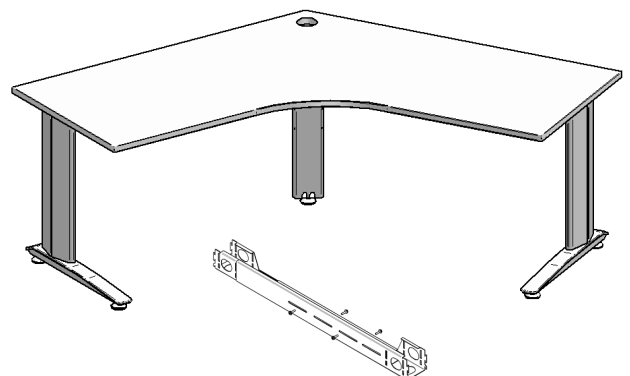STEP 6



Using the bolts supplied with the beam, install 2 bolts front and back of each beam as per above.

