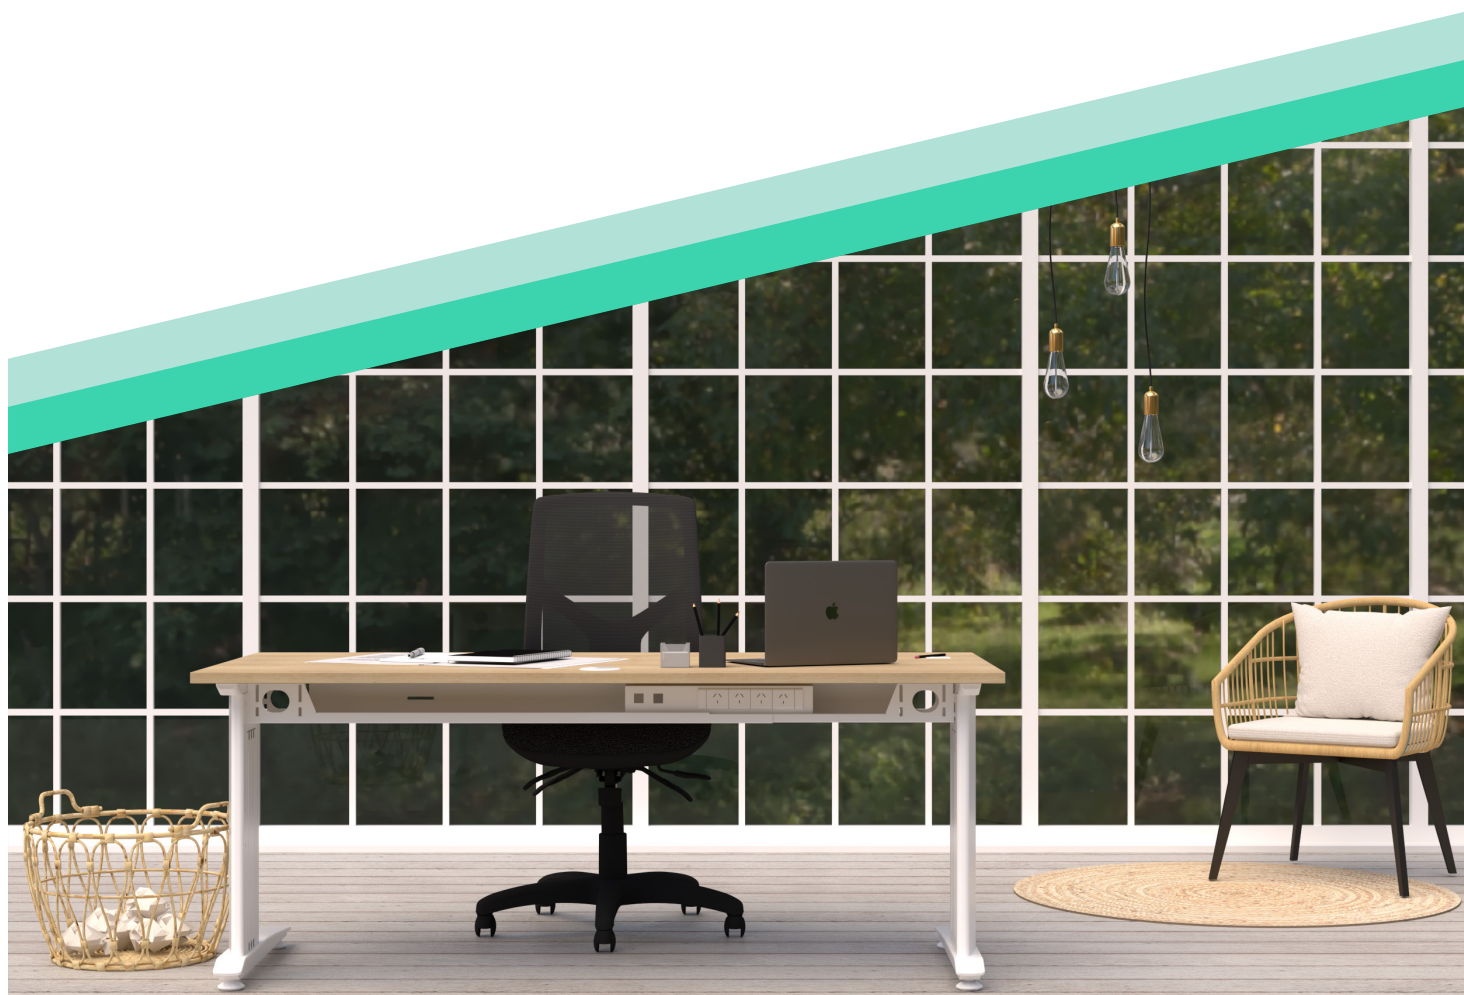


ENERGY DESK **ASSEMBLY GUIDE**





Tools Required



Battery Drill



#2 Phillips Driver Tip



#2 Square Driver Tip



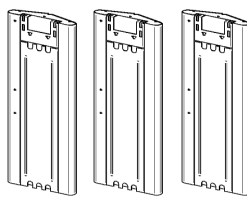

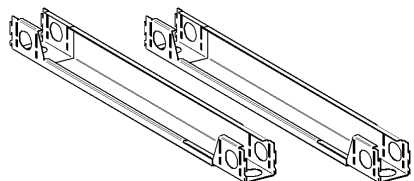
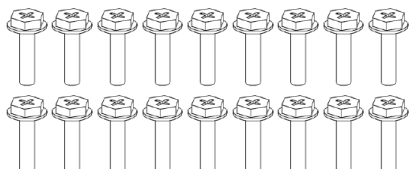
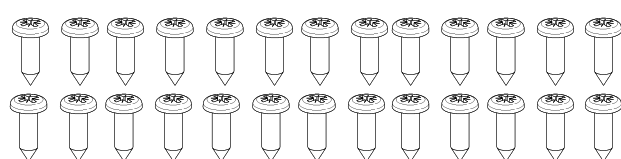
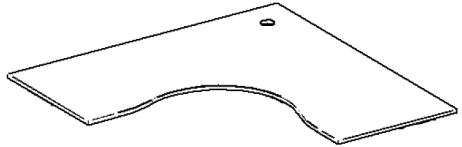


Soft Hammer

Accent
workspace furniture solutions

CORNER WORKSTATION


PARTS LIST

NO.	NAME	QUANTITY	IMAGE
1	Foot	3pcs	
2	Leg Top Plate	3pcs	
3	Leg Column	3pcs	
4	Option: 90degree Back Corner Leg	1pc	
6	Extendable Beam	2pcs	
7	Bolt A	18pcs	
8	Bolt B	26pcs	
9	Desk Top	1pcs	

CORNER WORKSTATION


ASSEMBLY INSTRUCTION

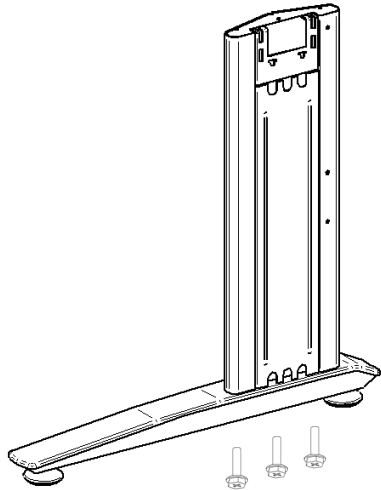STEP 1




Attach Leg column to Foot, using bolt A. Make sure the bolt holes on the leg column are to the back of the foot as per above.

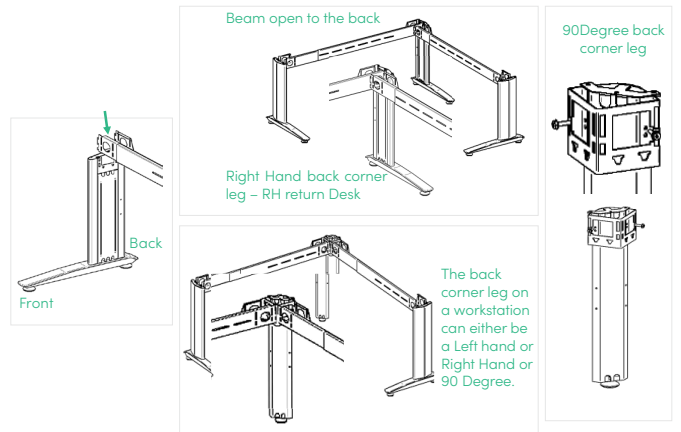STEP 2




Attach the Extendable beam to the leg column as per above. *Note: The beam can be installed with the open side to either the front or back, depending on the preference of the user. Use a nylon hammer to hit the top of the beam into place.*

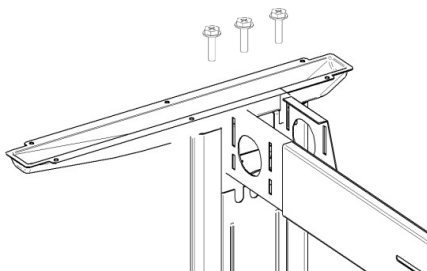STEP 3




Attach Leg top plate to the top of the Leg columns using bolt A.

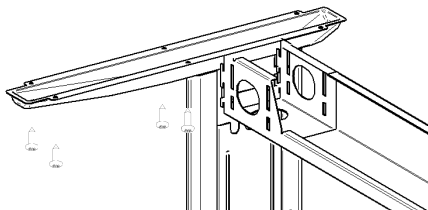STEP 4



Place Desk top on the base frame, attach the desk top to the frame with bolt B.

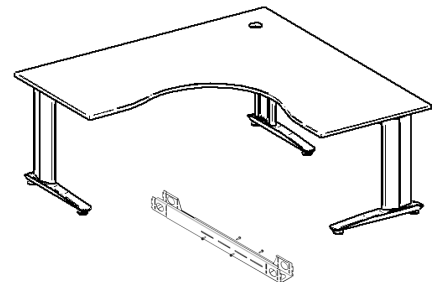STEP 5



Using the bolts supplied with the beam, install 2 bolts front and back of each beam as per above.

