



Ligna Bar Leaner

Assembly Guide



Need a hand?

Contact us at info@knightgroup.co.nz or 0800 143 143 for assistance.

knightgroup.co.nz

Thank you for purchasing Knight product.

**Please carefully read the assembly instructions prior to installment to gain a complete understanding of the product.
It provides you with important information about the safety, use, installation and maintenance.**

WARNING: FAILURE TO COMPLY WITH OR OBSERVE ALL ASSEMBLY, SAFETY AND OPERATION INSTRUCTIONS REGARDING THE USE OF THIS PRODUCT MAY RESULT IN SERIOUS BODILY INJURY.

Safety

- The product must be used in a safe manner. Inappropriate use may cause damage to the product and/or cause bodily harm to the user or persons nearby.
- Don't locate furniture in direct sunlight or near air-conditioning inlet or heating radiator.
- Don't put high-temperature or frozen objects on furniture.
- Safely carry product to location of assembly.
- Retain this operation manual and pass it on to any future owner.

Set Up and Installation

- Assemble the product according to the assembly instructions.
- To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.
- Place the product a safe distance from window frames, radiators, furniture etc. so that persons cannot become trapped.


Due to continuous improvement of our products, our assembly instructions may not be in complete accordance with the product and we apologise in advance.

Any questions contact Knight on 0800 143 143




Tools Required: Powered Screwdriver


Ligna Bar Leaner - Parts

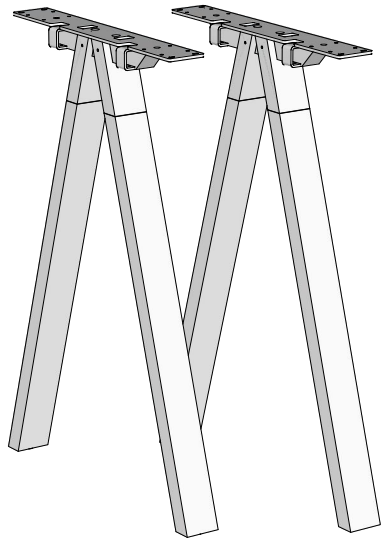

2 x Leg sets

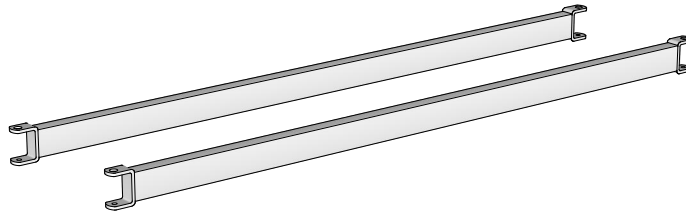

2 x Rails



2x Rail Spacer



8 x M6x16




24 x ST6x20


Step 1




8 x M6x16

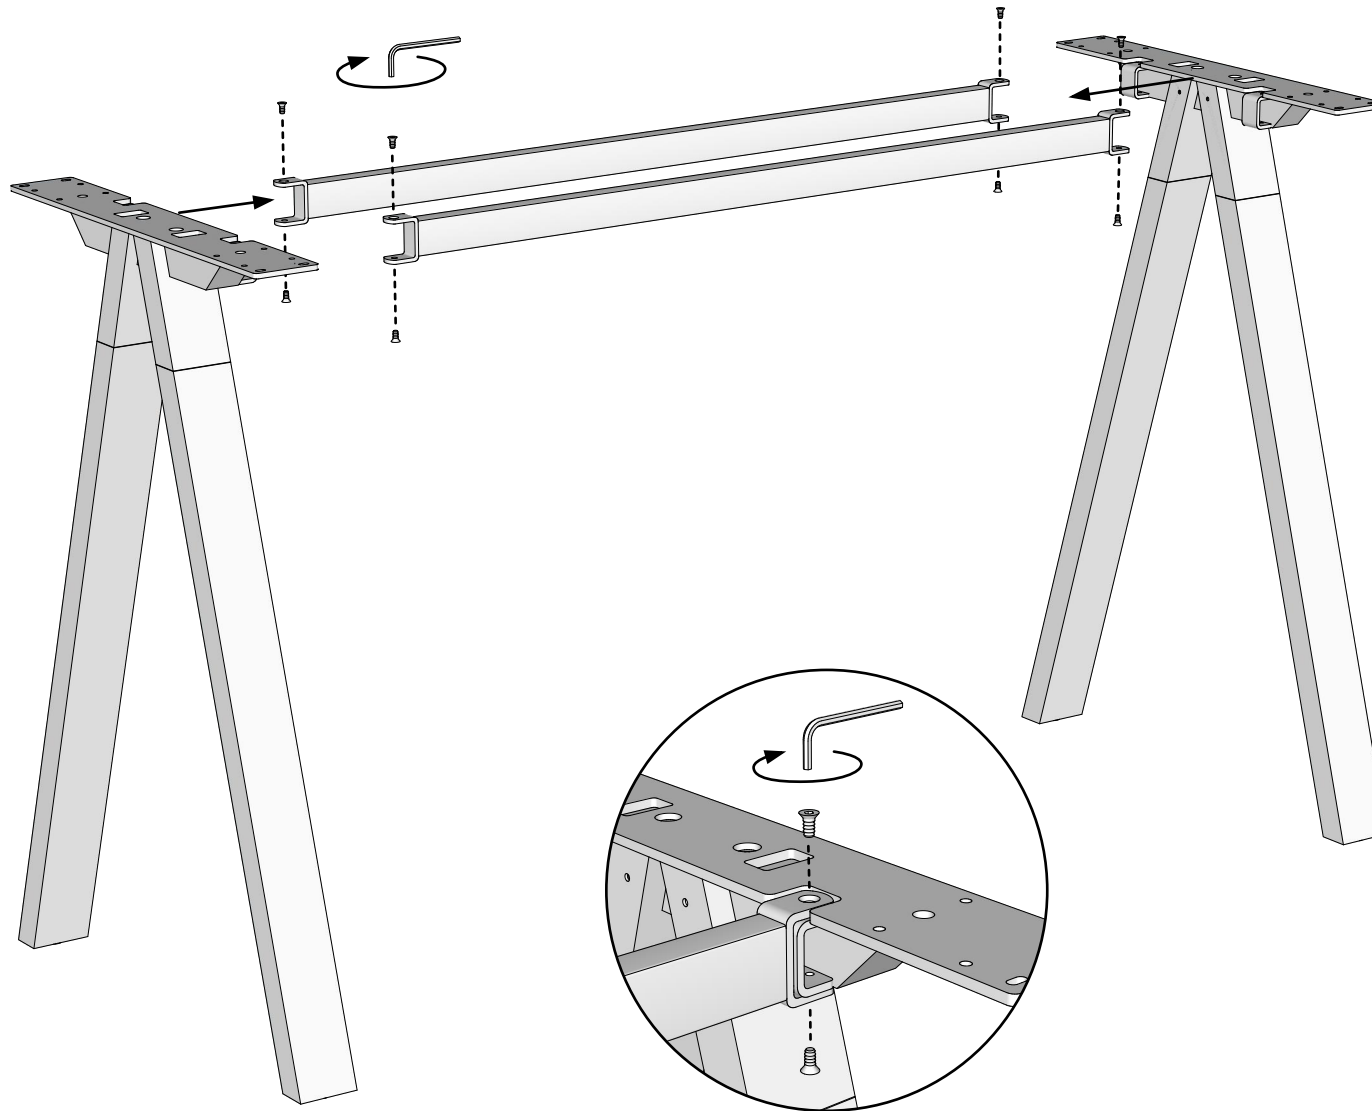

Step 2



2x Rail Spacer

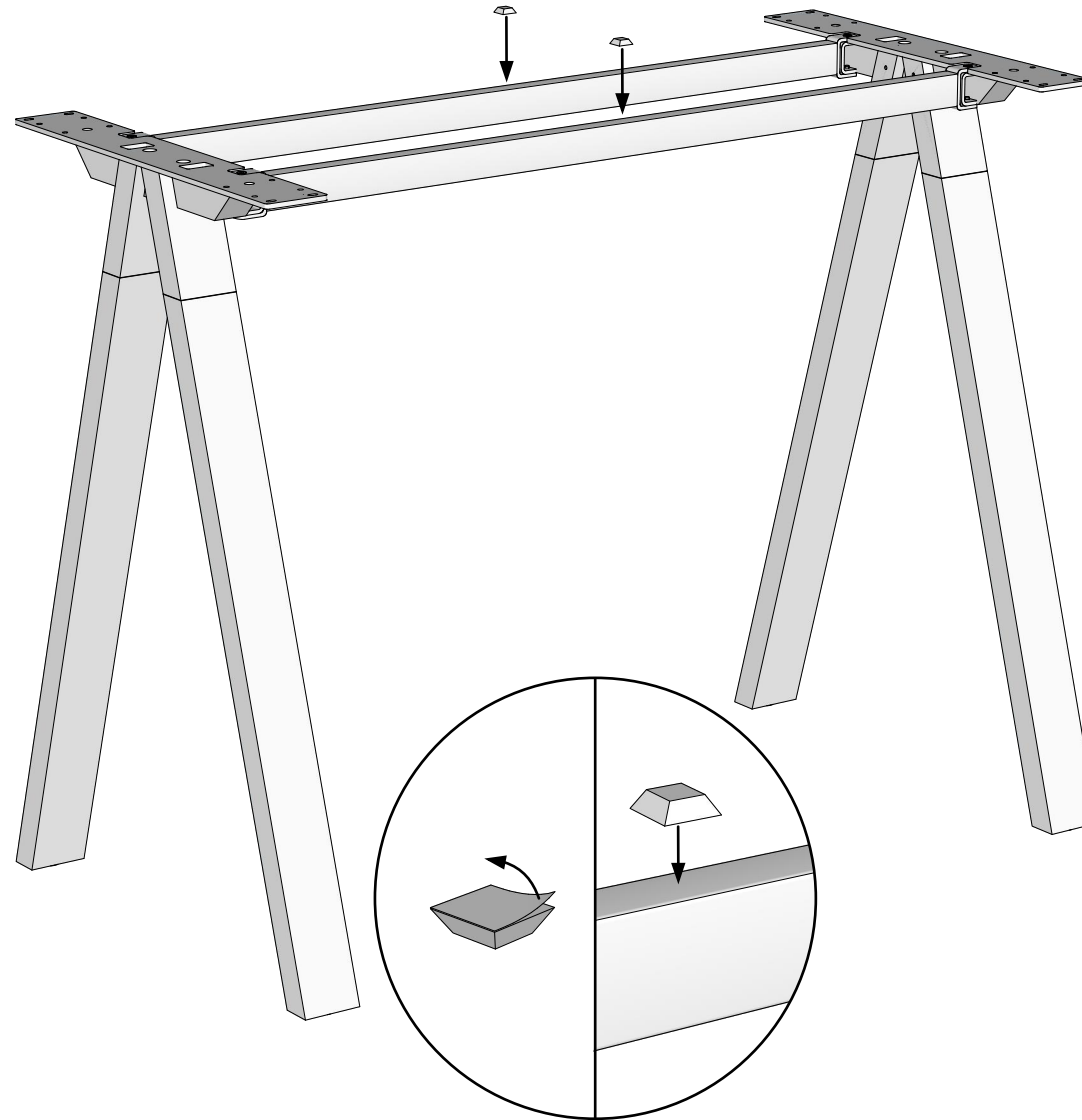


Step 3




24 x ST6x20

If using a cable tray,
attach it before the
worktop is attached.
(See page 5).

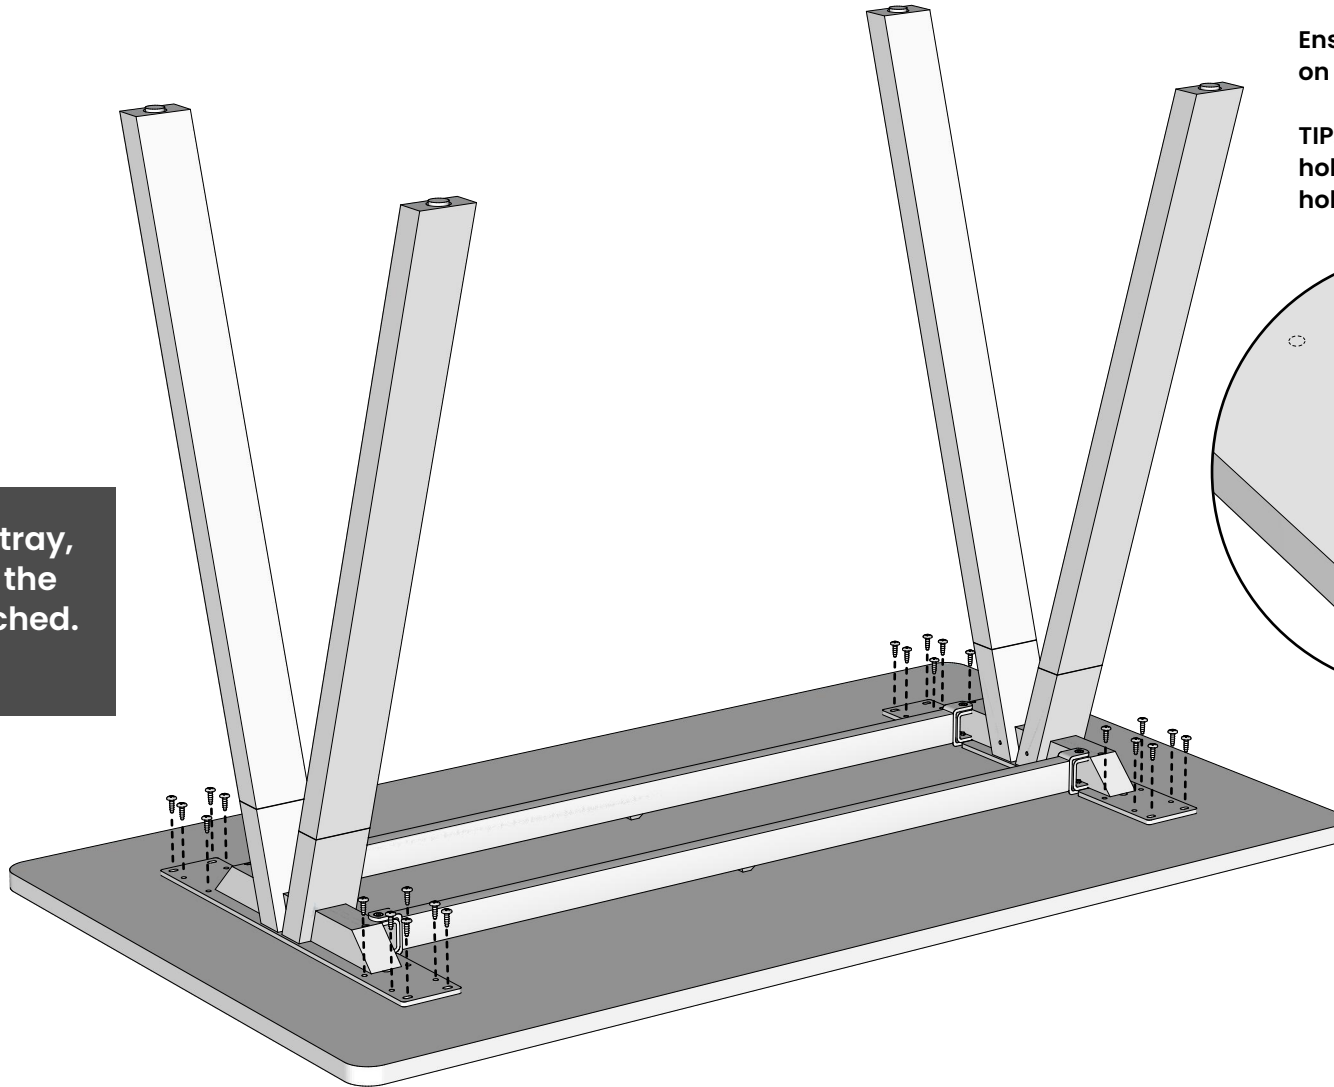


Ensure the frame is centered
on the worktop.

TIP: Pre-mark the leg screw
holes, drill a 2mm wide pilot
hole, 5mm deep.

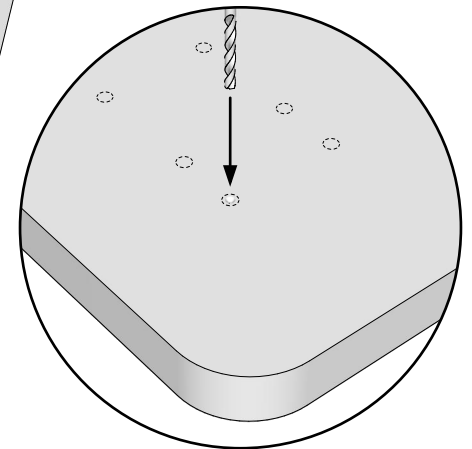

Optional: Cable Tray

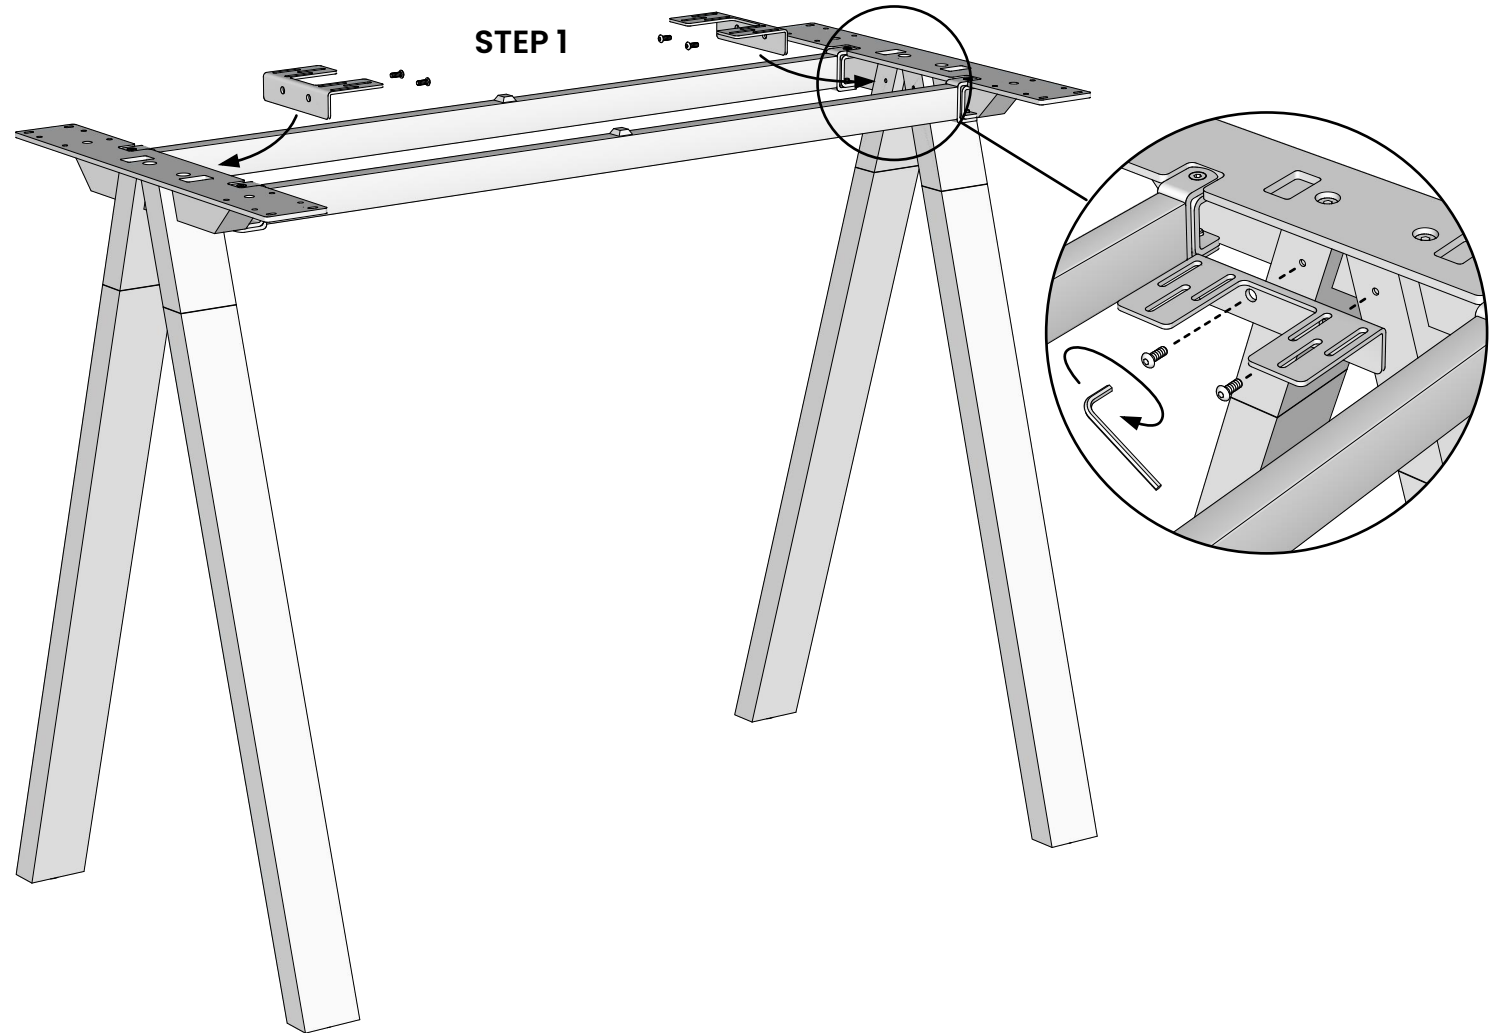


**If using a cable tray,
attach it before the
worktop is attached.**

Optional: Cable Tray


4 x M6x20


12 x M6x12


12 x M6 Nut

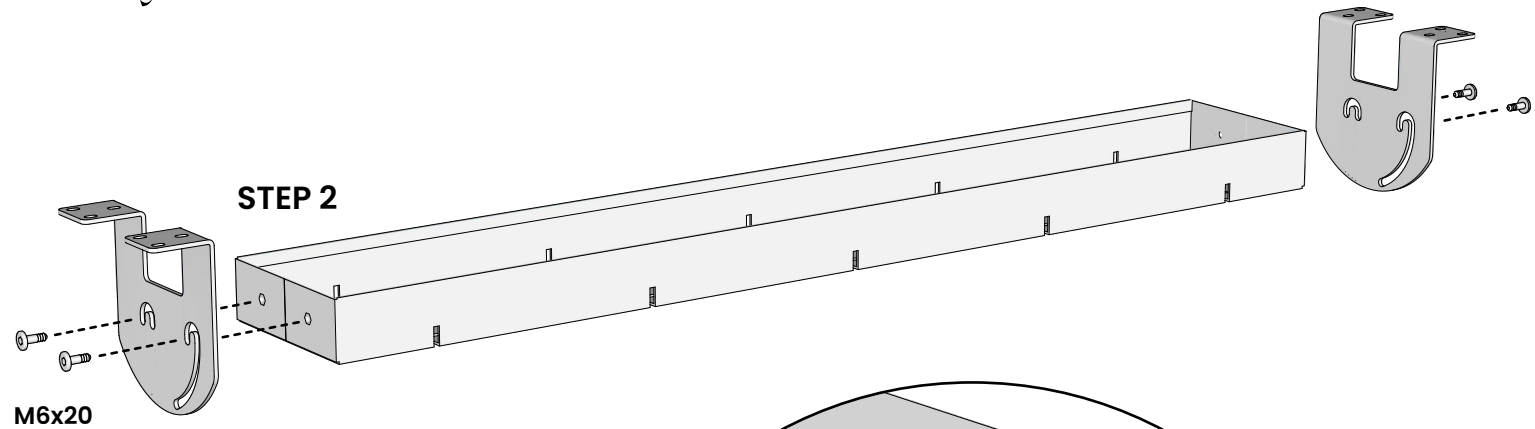

STEP 3

